

### Important

**Before using this Lever Bar any operator must read and understand this instruction manual and be trained in its use. Failure to observe the instructions in this handbook will invalidate the warranty.**

If any operator has any doubt about the suitability of the equipment for the operation or any problem understanding the instruction manual then they should contact the STS Support Line.

Never allow any part of your body or anyone else's to be put in a position where they might get injured by the movement of the lever bar.

The lever bar is designed to move drums by rotating them.

An operator is moving a drum of considerable weight and extreme caution should be used at all times.

### Operating Instructions

The operator connects the lever bar to the top lip of the drum. The bar can then be lifted and pulled at the same time to rotate the drum in the direction you want the drum to move.

The drum will only move a little and you will need to reposition the lever bar to make the next movement.

The lever bar can be turned over to allow you to move the drum in the other direction.

Ensure that damaged or missing safety signs are replaced. These are available from STS.

### Types of Drums that can be moved

- LEV01 Tight head steel drums only
- LEV02 Open Top steel drums only
- For non standard drum types contact STS Technical Support



**Method as previously described being shown on an Open Top Steel Drum**

Please find a link to our instruction video: <https://youtu.be/bw5PKdUB1Lo>

**If you do not understand any part of this manual and/or need assistance, please contact us.**

**Technical Support Line: +44 (0)1736 851050**

Bespoke Handling Equipment Ltd, Leedstown, Hayle, Cornwall, TR27 6DS, UK.

Website: [www.sts-trolleys.co.uk](http://www.sts-trolleys.co.uk) Email: [sales@sts-trolleys.co.uk](mailto:sales@sts-trolleys.co.uk) Tel: +44 (0)1736 851050